



## B-73-A FLUSHOMETER HANDLE INSTALLATION KIT

**IMPORTANT:** Water does not need to be shut off, but use caution to **NOT ACTIVATE** the valve.


- 1** Remove Handle Coupling and Gasket from Flushometer Valve Body.

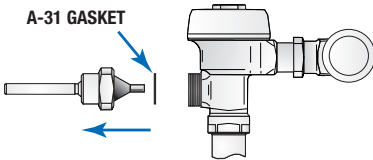



- 2** Replace with Handle Assembly and new Gasket using the existing Handle Coupling.

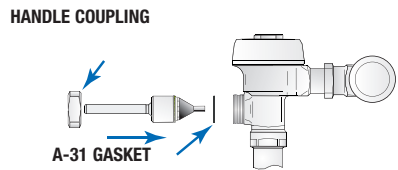

- 3** Tighten the Handle Coupling securely.

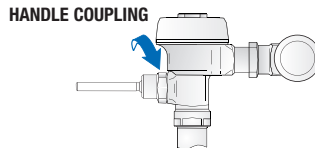

- 4** Activate Flushometer.

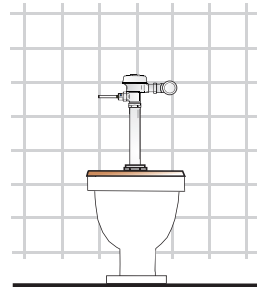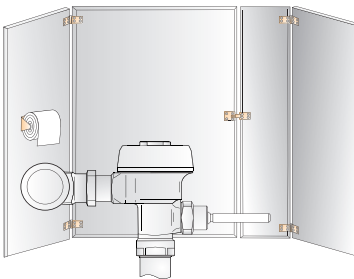



CuVerro is a touch surface that continuously kills bacteria left behind by dirty hands, killing more than 99.9% of bacteria\* within 2 hours.

## CuVerro<sup>®</sup> III

Bactericidal Copper Surface

Laboratory testing has shown that when cleaned regularly this surface:

- Kills greater than 99.9% of bacteria\* within two hours, and continues to kill 99% of bacteria\* even after repeated contamination
- Delivers continuous and ongoing bactericidal\* action, remaining effective in killing greater than 99.9% of bacteria\* within 2 hours.
- Helps inhibit buildup and growth of bacteria\* within 2 hours of exposure between routine cleaning and sanitizing steps.
- Kills greater than 99.9% of Gram-negative and Gram-positive bacteria\* within 2 hours of exposure.
- Continuously reduces bacterial\* contamination, achieving 99.9% reduction within 2 hours of exposure.

\**Staphylococcus aureus*, *Enterobacter aerogenes*, Methicillin-Resistant *Staphylococcus aureus* (MRSA), *Escherichia coli* O157:H7, *Pseudomonas aeruginosa* and, Vancomycin-Resistant *Enterococcus faecalis*.

### DIRECTIONS FOR USE:

It is a violation of Federal Law to use this product in a manner inconsistent with its labeling.

**PROPER CARE AND USE:** Clean and sanitize according to standard practice. Healthcare facilities must maintain the product in accordance with infection control guidelines. The use of this surface is a supplement to and not a substitute for standard infection control practices; users must continue to follow all current infection control practices, including those practices related to cleaning and disinfection of environmental surfaces. This surface has been shown to reduce microbial contamination, but does not necessarily prevent cross contamination.

This surface may be subject to recontamination and the level of active bacteria at any time will depend on the frequency and timing of recontamination and cleanliness of the surface (among other factors). In order to have proper antimicrobial effect, this product must be cleaned and maintained according to the directions for use.

**DO NOT WAX, PAINT, LACQUER, VARNISH, OR OTHERWISE COAT THIS PRODUCT.**

Routine cleaning to remove dirt and filth is necessary for good sanitation and to assure the effective bactericidal performance of this surface. Cleaning agents typically used for traditional hard, non-porous touch surfaces are permissible. The appropriate cleaning agent depends on the type of soiling and the measure of sanitization required. Normal tarnishing or wear of this product will not impair the bactericidal effectiveness.

**NOT APPROVED FOR DIRECT FOOD CONTACT OR FOOD PACKAGING USES.**

Items exposed to outdoor environmental conditions are not representative of indoor laboratory test conditions, and therefore, may impart reduced efficacy if not cleaned when visibly soiled.

**STORAGE AND DISPOSAL:** Dispose of by recycling or put in trash.

**WARRANTY STATEMENT:** If used as intended this product is wear-resistant and the durable bactericidal properties will remain effective for as long as the product remains in place and is used as directed.

Global Brass and Copper, Inc  
305 Lewis and Clark Blvd.  
East Alton, IL 62024  
www.CUVERRO.com  
1-877-311-CUVERRO(2883)

EPA Reg No 85353-3

Manufactured for:  
Sloan  
10500 Seymour Avenue  
Franklin Park, IL 60131  
www.sloan.com

SL-0001-1810

EPA Est No. 89887-IL-001  
0815158 Rev. 1