3

SF-2300/SF-2350 Faucets

PARTS LIST—SF-2300/SF-2350


ltem No.	Code No.	Part No.	Description
1.	_	_	Faucet Assembly w/Outlet
2.	_	SFP-16	Mounting Hardware Kit: includes Items 2A, 2B, 2C and 2D
2A.	_	_	Compression Fitting
2B.	_	_	Washers (2)
2C.	_	_	Wing Nuts (2)
2D.	_	_	Screws and Anchors for Control Module
3.	0362006	SFP-6	110 VAC/6 VDC Plug-In Adapter (US) (Model SF-2300 only)
4.	_	_	Batteries, 4 AA-size (all models)
5A.	0362040	SFP-40-A	Control Module with Adjustable Button (6 pin connector)
5B.	0362008	SFP-8	Control Module (Old Style 4 pin connector)*
6.	0362010	SFP-10	Flex Hose, Control Module to Spout
7.	0362045	SFP-45-A	Inlet adapter – 1/2" NPSM to 3/8" Compression Connection (not supplied with most international models)
8A.	0362041	SFP-41-A	Sensor Assembly (6 pin connector)
8B.	0362034	SFP-34	Sensor Assembly (Old Style 4 pin connector)*
9.	3365461	ETF-617-A	3/8" Bak-Chek® Tee Compression Fitting
use th		cement parts: SFF	istment feature in August 2008 for faucets made prior to August 2 2-34 and SFP-8


—	0335029	EAF-51	0.35 gpm (1.3 Lpm) spray head		
_	0335012	EAF-15	0.5 gpm (1.9 Lpm) vandal resistant spray head		
_	3362000	SFP-1000	0.35 gpm (1.3 Lpm) vandal resistant spray head		
—	0362013	SFP-13	0.5 gpm (1.9 Lpm) Spray head		
_	0362023	SFP-23	2.2 gpm (8.3 Lpm) Aerator		
_	0362024	SFP-24	2.2 gpm (8.3 Lpm) vandal resistant aerator		
—	0362020	SFP-26	220 VAC/6 VDC Plug-In Adapter (ASIA)		
_	0362025	SFP-25	220 VAC/6 VDC Plug-In Adapter (EURO)		
—	0362026	SFP-20	220 VAC/6 VDC Plug-In Adapter (UK)		
ACCESSORIES					
10.	0362035	SFP-35-A	100-240 VAC/6 VDC Gang Adapter Kit, includes 10A, 10B and 10C		
10A.	0362016	SFP-36-A	100-240 VAC/6 VDC Plug-In Adapter		
10B.	0362017	SFP-37	Cable Extension, 51" (1300 mm)		
10C.	0362018	SFP-38	Cable Splitter, 51" (1300 mm) – 5 included in kit		

REPAIR PARTS

11A.	0362015	SFP-15	Strainer For SFP8 and SFP40A modules with straight			
			inlet (Prior to year 2011).			
11B.	3315028	EBF-1004-	A Strainer For SFP40A modules with right angle inlet.			
			(Year 2011 to present).			
12.	0326045	MIX-135-A	Below Deck Thermostatic Mixing Valve			
13.	3326009	MIX-60-A	Below Deck Mechanical Valve Mixing Valve			
— in Ite	— in Item No. column = Not shown in illustration					

— in Code No. and Part No. column = Not sold separately

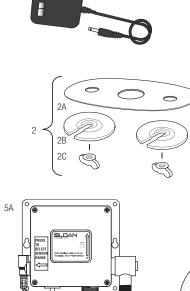



BA/8B

4 Battery


2D



10

10B

10A

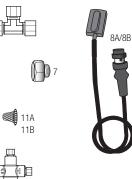

13

12

μþ

10C



Repair Parts and Maintenance Guide

SF-2300/SF-2350 Faucets

TROUBLESHOOTING GUIDE

1. Faucet delivers water in an uncontrolled manner.

A. Faucet is not working properly. Contact Sloan Technical Support.

2. Faucet DOES NOT deliver any water when Sensor is activated. INDICATOR: Solenoid valve produces an audible "CLICK."

A. Water supply stop(s) closed. Open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

INDICATOR: Solenoid valve DOES NOT produce an audible "CLICK."

- A. Batteries low (battery powered models). Replace batteries.
- B. Power failure (adapter powered models). Check power supply.
- 3. Faucet delivers only a slow flow or dribble when Sensor is activated.
 - A. Water supply stop(s) are partially closed. Completely open water supply stop(s).
 - B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.
 - C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.
 - D. Faucet is not working properly. Contact Sloan Technical Support.
- 4. Faucet DOES NOT stop delivering water or continues to drip after user is no longer detected.

A. Faucet is not working properly. Contact Sloan Technical Support.

5. The water temperature is too hot or too cold on a faucet connected to hot and cold supply lines.

A. Supply Stops are not adjusted properly. Adjust Supply Stops.

CARE AND CLEANING INSTRUCTIONS

DO NOT USE abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, protect the faucet from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).